


Installation Guide




Setup

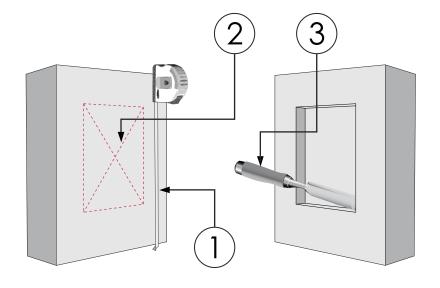

Preparing Surface For Installation

- 1. Measure the desired height and centre position that the flush pull will sit at from a fixed point (door edge, door frame, etc.)
- 2. Mark the required cutout length (L) and width (W) from the flush pull back box. Use a spirit level to ensure the cutout shape is level.
- 3. Use a chisel or prefered method to evenly remove material to the correct depth (D) as shown in the table below. If installing flush pulls back-to-back, you may choose to cut a hole right through the door.

Installation

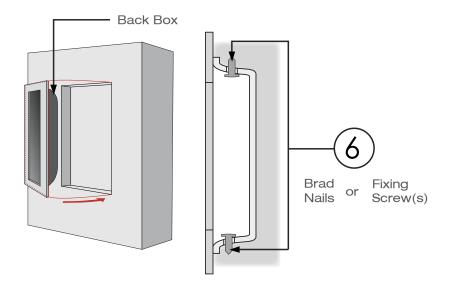

Installing The Product

- 4. Ensure the alignment of the back box matches the shape and size of the cut out made. Adjust if needed.
- 5. Apply the necessary amount of adhesive as required by the surface condition to the cut surface of the door and press flush pull into cavity. Silicone based adhesive is recommended.
- 6. If required, use the included brad nails or fixing screw(s) to secure the top and bottom of the back box into the the cavity.
- 7. For flush pulls with one fixing point, put fixing point on top.

Contact Us

t + 61 3 9300 8888 f + 61 3 9310 1866

sales@designerdoorware.com.au designerdoorware.com.au

7 Kimpton Way, Altona, Victoria, Australia 3018

Showroom

431 Church St, Richmond, Victoria, Australia 3121