


DC-A35-SL

REGULAR FIXING **PULL SIDE**
DOOR TEMPLATE LEFT HAND OPENING IN



making it personal

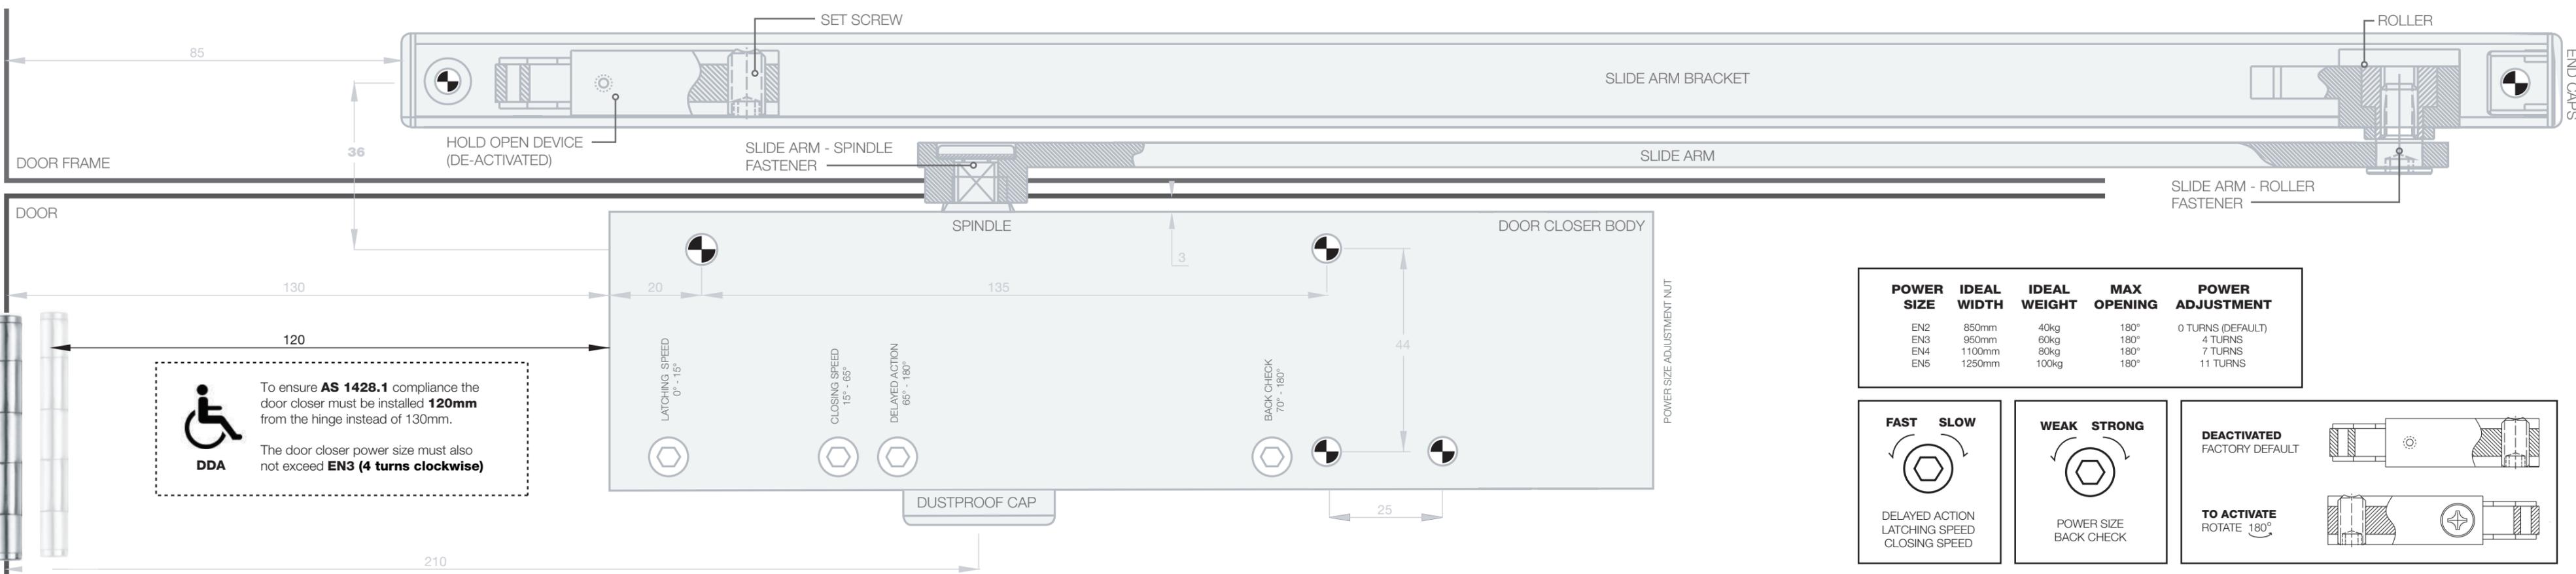

DDA To ensure **AS 1428.1** compliance the door closer must be installed **120mm** from the hinge instead of 130mm.
The door closer power size must also not exceed **EN3 (4 turns clockwise)**

POWER SIZE	IDEAL WIDTH	IDEAL WEIGHT	MAX OPENING	POWER ADJUSTMENT
EN2	850mm	40kg	180°	0 TURNS (DEFAULT)
EN3	950mm	60kg	180°	4 TURNS
EN4	1100mm	80kg	180°	7 TURNS
EN5	1250mm	100kg	180°	11 TURNS

FAST SLOW

DELAYED ACTION
LATCHING SPEED
CLOSING SPEED

WEAK STRONG


POWER SIZE
BACK CHECK

DEACTIVATED
FACTORY DEFAULT


TO ACTIVATE
ROTATE 180°

NOTE: THE HOLD OPEN DEVICE SHOULD BE DE-ACTIVATED FOR FIRE DOORS


ALTERNATIVE MOUNTING CONFIGURATION
TRANSOM FIXING **PUSH SIDE** DOOR GUIDE

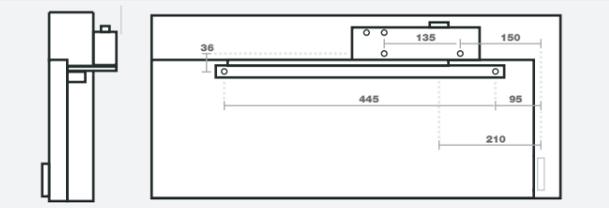

ALTERNATIVE MOUNTING CONFIGURATION
REGULAR FIXING **PUSH SIDE** DOOR GUIDE

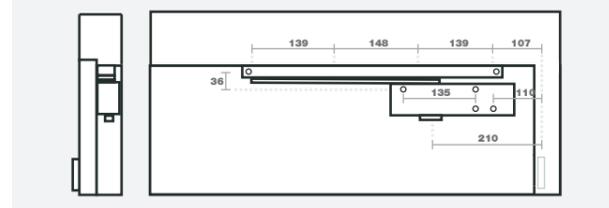

ALTERNATIVE MOUNTING CONFIGURATION
TRANSOM FIXING **PULL SIDE** DOOR GUIDE

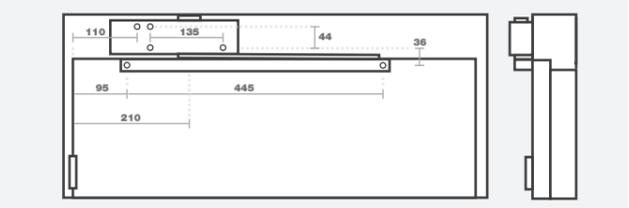

ASSEMBLY STEPS



1. Pre-drill appropriate holes using the template provided.
2. Ensure the holding spring and roller are within the slide arm bracket, then fix the bracket to the door or door frame.
3. Fasten the slide arm to the door closer spindle at a 45° angle so that it's prepared for preloading in a later step.
4. Mount the door closer to the door or door frame.
5. Push the slide arm (preload) 45° and fasten it to the roller within the slide arm bracket.
6. **IF REQUIRED** Activate and position the hold open device. Tighten the set screw to position the device.

ADJUSTMENT STEPS

1. Begin by adjusting the power size in accordance to the weight and width of the door.
NOTE: Unlike the standard and parallel arm assemblies, the slide arm assembly is not EN 1154 compliant. The power adjustment nut is set to 0 as a factory default, and can be turned clockwise 360° a total of 13 times.
2. Adjust delayed action, closing speed and latching speed in any order.
NOTE: Delayed action will always be slower than closing speed. This can't be changed through adjustment.
3. Adjust the back check to any amount.
4. **IF REQUIRED** Tighten the nut in the hold open device to increase the strength of the hold open function.


DC-A35-SL

REGULAR FIXING **PULL SIDE**
DOOR TEMPLATE RIGHT HAND OPENING IN

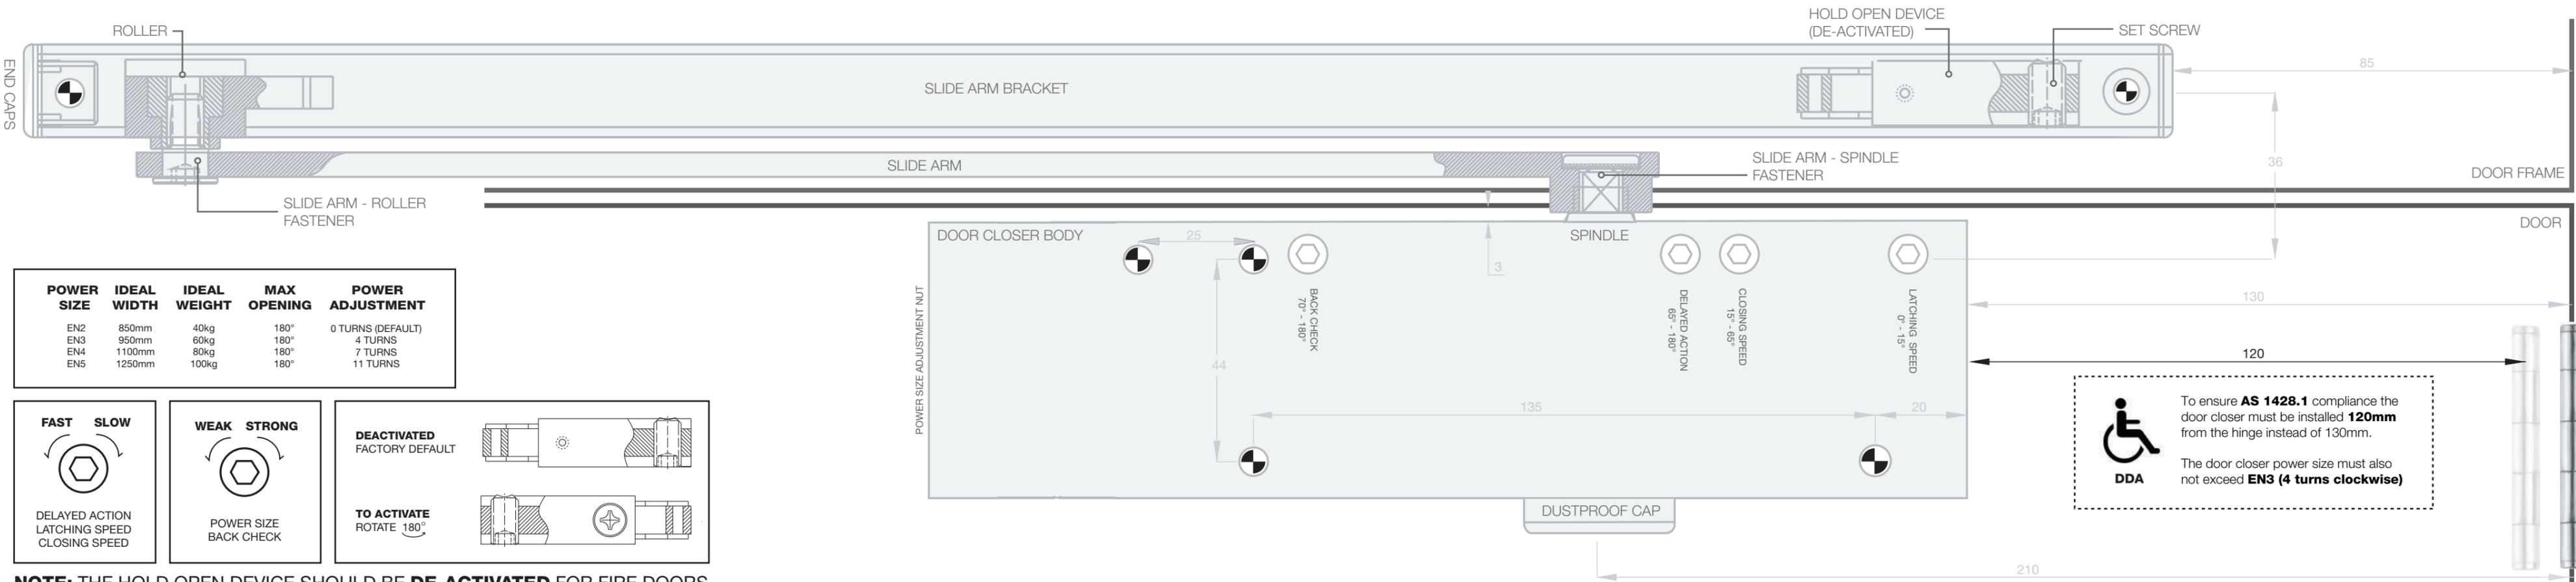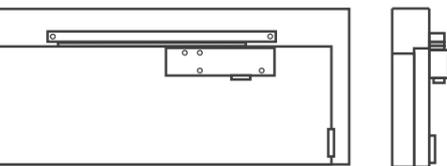

POWER SIZE	IDEAL WIDTH	IDEAL WEIGHT	MAX OPENING	POWER ADJUSTMENT
EN2	850mm	40kg	180°	0 TURNS (DEFAULT)
EN3	950mm	60kg	180°	4 TURNS
EN4	1100mm	80kg	180°	7 TURNS
EN5	1250mm	100kg	180°	11 TURNS

FAST SLOW

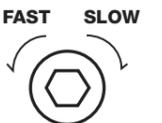

DELAYED ACTION
LATCHING SPEED
CLOSING SPEED

WEAK STRONG



POWER SIZE
BACK CHECK

DEACTIVATED
FACTORY DEFAULT



TO ACTIVATE
ROTATE 180°






NOTE: THE HOLD OPEN DEVICE SHOULD BE **DE-ACTIVATED** FOR FIRE DOORS

 **DDA**

To ensure **AS 1428.1** compliance the door closer must be installed **120mm** from the hinge instead of 130mm.

The door closer power size must also not exceed **EN3 (4 turns clockwise)**

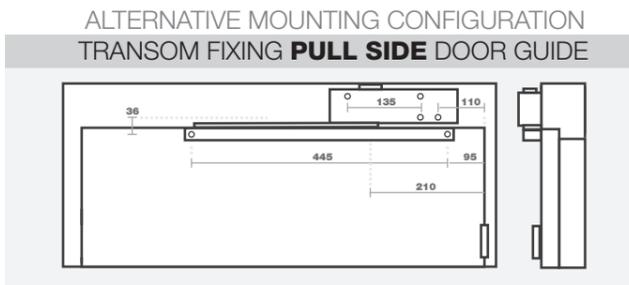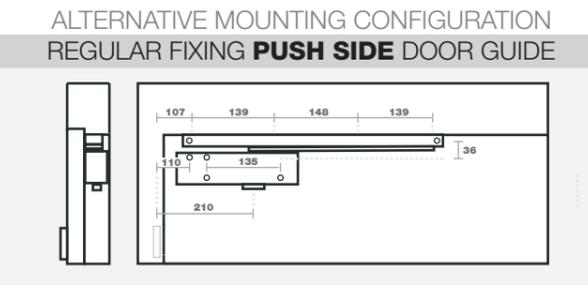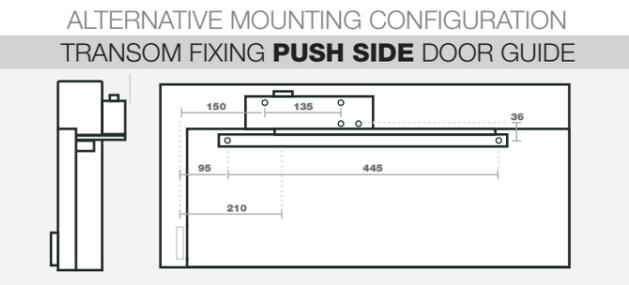

ASSEMBLY STEPS

- Pre-drill appropriate holes using the template provided.
- Ensure the holding spring and roller are within the slide arm bracket, then fix the bracket to the door or door frame.
- Fasten the slide arm to the door closer spindle at a 45° angle so that it's prepared for preloading in a later step.
- Mount the door closer to the door or door frame.
- Push the slide arm (preload) 45° and fasten it to the roller within the slide arm bracket.
- IF REQUIRED** Activate and position the hold open device. Tighten the set screw to position the device.

ADJUSTMENT STEPS

- Begin by adjusting the power size in accordance to the weight and width of the door.

NOTE: Unlike the standard and parallel arm assemblies, the slide arm assembly is not EN 1154 compliant, since the sliding arm assembly causes power loss. The power adjustment nut is set to 0 as a factory default, and can be turned clockwise 360° a total of 13 times.
- Adjust delayed action, closing speed and latching speed in any order.

NOTE: Delayed action will always be slower than closing speed. This can't be changed through adjustment.
- Adjust the back check to any amount.
- IF REQUIRED** Tighten the nut in the hold open device to increase the strength of the hold open function.